

# 21" Tubular Skylight Security Bar Install



10821 North 23rd Avenue  
Phoenix, AZ 85029  
www.nltubular.com  
800-363-9865



**PLEASE READ THIS INSTALLATION PRIOR TO STARTING TUBULAR SKYLIGHT INSTALLATION.** This install should be used in conjunction with the standard installation instructions. Please note gasket placement is different when installing a Security Bar.

## Parts List:

- A. (2) 3/16" Rivet
- B. Security Bar

## Tool Required

3/16" Rivet Gun



## IMPORTANT!

**Black gasket placement is different than on a standard installation.**

## GASKET PLACEMENT

When installing a Security Bar it is important that the black horse hair gasket be placed 3/4" below the edge of the flashing rim in order to leave room to attach the security bar. (see Figure 1)

*The following steps should be done after the light pipe has been installed:*

**Step 1** Locate the two large pre-drilled holes on the flashing lip. These holes are counter-sunk and large enough to accommodate the 3/16" rivets. (see Figure 2)

**NOTE:** On the curb-mount flashing there are 4 holes diagonally from the 4 corners of the of the curb box (see dashed lines on Figure 2) - these are NOT the correct holes.

**Step 2** With the "L" shaped tab facing down, line up the holes on the security bar to the larger, countersunk holes on the inside of the flashing lip. The "L" shaped tab should sit on top of the black horse hair gasket. (see Figure 2)

**Step 3** Place the head of the 3/16" rivet through the pre-drilled hole on the flashing and into the pre-drilled hole on the "L" shaped tab on the security bar. Place one rivet on each side of security bar. (see Figure 3)

**Step 4** Using a 3/16" rivet gun, snap off pin end of rivet to secure the bar to the flashing.

*Return to installations instructions to complete install...*

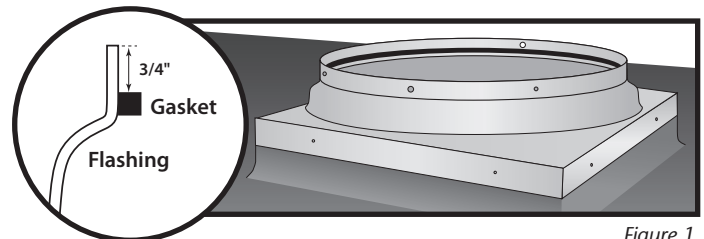


Figure 1

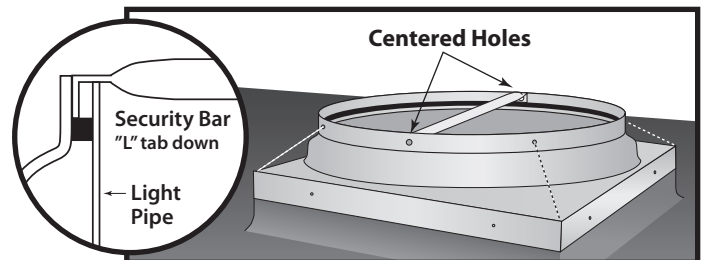


Figure 2

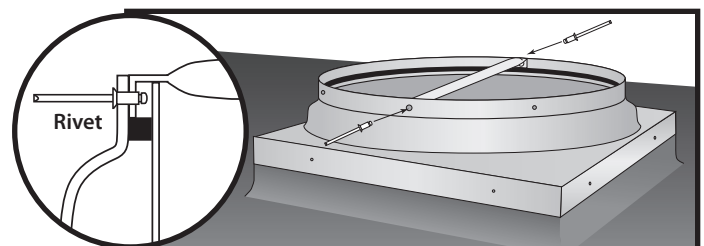


Figure 3

